

Genesis Blower Gx0-2VN-S & Gx0-2VH-S

Before the blower is connected electrically, please set the jumpers on circuit board. Default settings are with jumpers placed in position 1 & 2. Position 3 shall not be connected.

Jumper settings

	ON (mounted)(default)	OFF
Jumper 1	Dry-blowing program activated	No dry-blowing
Jumper 2	Blower runs on full speed when activated.	Blower starts at full speed and drops to low after 2 seconds.
Jumper 3 (Not in use)	-	-

Functional description

Buttons

1. ON/OFF button. Press this to start/stop the blower
2. +/- button. Press and hold to increase/decrease blower speed
3. ~ button. Start/stop of pulsating mode.

Automatic stop

The blower stops automatically 30 minutes after touch has been used last time.

Dry-blowing

30 minutes after manual and automatic stop, the dry-blowing program will start. The blower starts at high speed for 2 seconds. It then falls to low speed, then slowly rises to high speed again within 30 seconds and stays there for 4.5 minutes. Under countdown and execution of the program, LED will flash if jumper 2 is mounted.

Connection diagram

