





Quick Start Card

in.xm2-ce™ European version

1- Connect all outputs & keypads

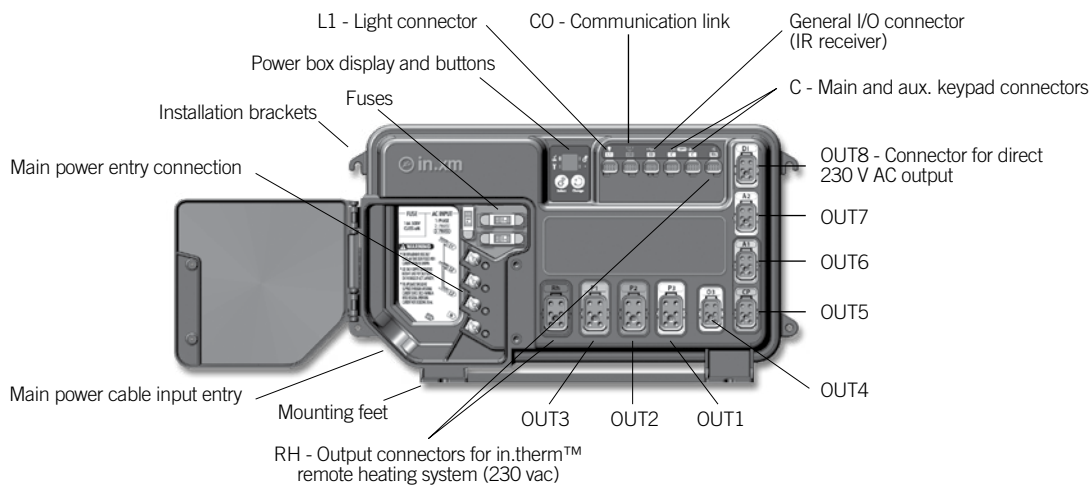


2- Connect the main power

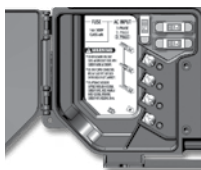


For 230 VAC


Correct wiring of the electrical service box, RCD, and pack terminal block is essential. Call an electrician if necessary.

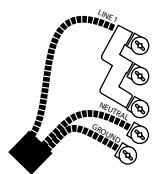


1 x 230 VAC Single-phase

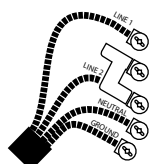

2 x 230 VAC Dual-phase

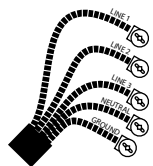

3 x 230 VAC Three-phase

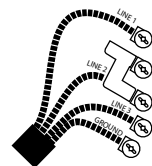

3 x 230 VAC Three-phase (Delta)

3- Select spa configuration (see chart next page)

LL

First, the led display will show "LL" and "01" continuously.



Press **Change** button to choose the appropriate configuration for your spa.




Press **Select** button to confirm. (The pack will now reset and reboot)

Note: To re-enter the configuration selection menu, press **Select** button and hold for 5 seconds.

For more information, see our website: www.geckoalliance.com

4- Select breaker current

Make sure all accessories are linked to the bonding connector and connected to pack. Make sure the spa pack door is closed. Turn on the breaker.

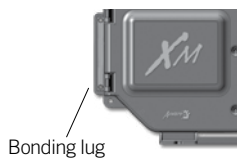

Bonding lug



4.a- Selecting number of phase (Ph)

Ph 1 = 1 phase
Ph 2 = 2 phases
Ph 3 = 3 phases



Press **Change** button to choose the phase.



Press **Select** button to confirm.

4.b- Selecting breaker current (Br)



Press **Change** button to choose the breaker current value.



Press **Select** button to confirm. (The pack will now reset and reboot.)

Br values displayed by the system correspond to the maximum amperage capacity of the RCD.

Ph	Br (RCD)
1P	40 A max.
2P	20 A max.
3P	16 A max.

For more information, see our website: www.geckoalliance.com



Configuration selection chart

Software #186, rev. 3.00

Config. #	Pump 1	Pump 2	Pump 3	Pump 4	Pump 5	BL	Circ. Pump	Heat with P1 or CP?	Filtration / Ozone with P1 or CP?
1	1sp	_	_	_	_	_	x	CP	CP
2	1sp	_	_	_	_	x	x	CP	CP
3	1sp	1sp	_	_	_	_	x	CP	CP
4	1sp	1sp	_	_	_	x	x	CP	CP
5	1sp	1sp	x	_	_	_	x	CP	CP
6	1sp	1sp	x	_	_	x	x	CP	CP
7	1sp	1sp	x	x	_	_	x	CP	CP
8	1sp	1sp	x	x	_	x	x	CP	CP
9	1sp	1sp	x	x	x	_	x	CP	CP
10	1sp	1sp	x	x	x	x	x	CP	CP
11	2sp	_	_	_	_	_	_	P1	P1
12	2sp	_	_	_	_	_	x	CP	CP
13	2sp	_	_	_	_	x	_	P1	P1
14	2sp	_	_	_	_	x	x	CP	CP
15	2sp	1sp	_	_	_	_	_	P1	P1
16	2sp	1sp	_	_	_	_	x	CP	CP
17	2sp	1sp	_	_	_	x	_	P1	P1
18	2sp	1sp	_	_	_	x	x	CP	CP
19	2sp	1sp	x	_	_	_	_	P1	P1
20	2sp	1sp	x	_	_	_	x	CP	CP
21	2sp	1sp	x	_	_	x	_	P1	P1
22	2sp	1sp	x	_	_	x	x	CP	CP
23	2sp	2sp	x	_	_	_	_	P1	P1
24	2sp	2sp	x	_	_	_	x	CP	CP
25	2sp	2sp	x	_	_	x	_	P1	P1
26	2sp	2sp	x	_	_	x	x	CP	CP

Glossary

P1	Pump 1
CP	Circulation Pump
1sp	1 speed pump
2sp	2 speeds pump
X	Installed

Note: This low level configuration table is valid for the software #186 revision 3. This information is displayed on top side keypad at spa pack power-up. Software number is displayed first (ex: **SAFE** , **SP** , **186**), followed by revision (ex: **3.00**). For in.k600™ (menu-driven interface), you will find the information in **Info** sub-menu located in **Options** menu.

For complete TechBook or more information, see our website: www.geckoalliance.com

